




1401 S. Broadway Suite 103A | Joshua, TX 76058

## INSTALLATION INSTRUCTIONS

### CANAM MAVERICK X3 SHIFTER PANEL

Read Instructions entirely, and view illustrations before beginning.

ITEM	DESCRIPTION	QTY
A	TOP PLATE - BLACK	1
B	BOTTOM PLATE - RED	1
C	STAINLESS STEEL PLASTIC SCREW	4

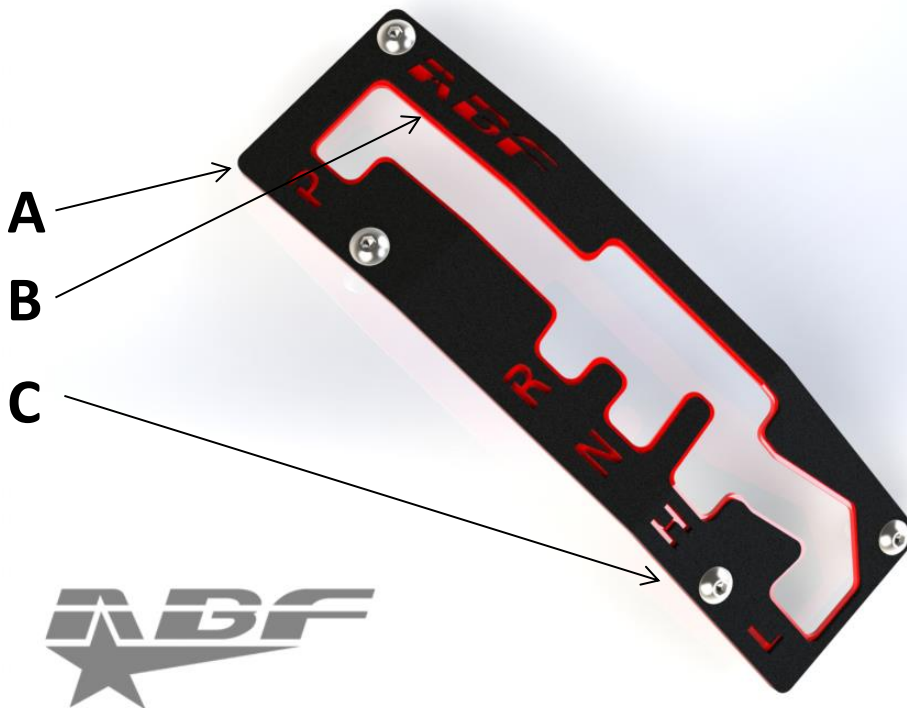

### Have questions or comments?



817-366-6110



817-366-6110



INFO@ABFFABRICATION.COM

*Thank You for Sharing*



FACEBOOK.com/ABFfabrication



### LIABILITY STATEMENT

ABF Fabrication accessories are engineered to best fit customer ATV/UTV's in stock condition. cutting, grinding, or modifying any original, or aftermarket, accessories will void any warranty offered by ABF fabrication and is not suggested. ABF Fabrication accessories could have fitment issues with other aftermarket accessories. If Customer has aftermarket accessories on vehicle, contact ABF Fabrication to ensure that all accessories will be compatible.

Customer should be aware that installing suspension accessories, wheels and tires, axles or other components may change the behavior of the vehicle and may require more frequent maintenance and part wear. Operating any off-road vehicle while, or after, consuming alcohol and/or drugs increases risk of bodily harm or death. No warranty or representation is made as to this accessories ability to protect customer from severe injury or death. ABF Fabrication urges operators and passengers to always wear a helmet and appropriate riding gear.

By purchasing and installing ABF Fabrication accessories, customer agrees that should any damages occur, ABF Fabrication will not be held responsible for repair fees, replacement parts, and shipping costs. ABF Fabrication, nor any 3rd party, will not be held responsible for any direct, indirect, incidental, special, or consequential damages that result from any accessories purchased from ABF Fabrication. The total liability of ABF Fabrication to customer for all damages, losses, and causes of action, if any, is not to exceed the total purchase price paid for the accessories that gave rise to the claim.

ABF Fabrication will warranty only accessories purchased from ABF Fabrication. Any damages or issues arising with OEM parts or other manufacturers accessories will not be covered by ABF Fabrication. ABF Fabrication accessories are not warranted if accessory was installed incorrectly, misused, or changed in any way.

## Removal

1. Set the Shifter to N (Neutral) Position. Loosen the Jam Nut from the Shift Knob.
2. Unscrew the Shift Knob from the Shift Lever, and remove the Knob. **FIG 1**

## Installation

1. Position the Shift Panel (B) and mark the top left hole. **FIG 2**
2. Remove Panel (B) and pilot drill the hole using an 1/8" Drill bit. DO NOT OVERSIZE. **FIG 2**
3. Use supplied screw (C) To attach the top left corner of panel (B) to the Dash.
4. Shift Panel (B) is lined up, now drill the remaining 3 holes using an 1/8" Drill bit. **FIG 3**
5. Remove the top left holding screw (C).
6. Assemble the Top Panel (A) over the Bottom Panel (B) and Secure with 4 screws (C). **FIG 4**
7. Reinstall shift knob onto shift lever using blue Loctite. Secure shift knob with the jam nut.
8. Take a step back, and enjoy the new look! Be sure to take PHOTOS and post them!



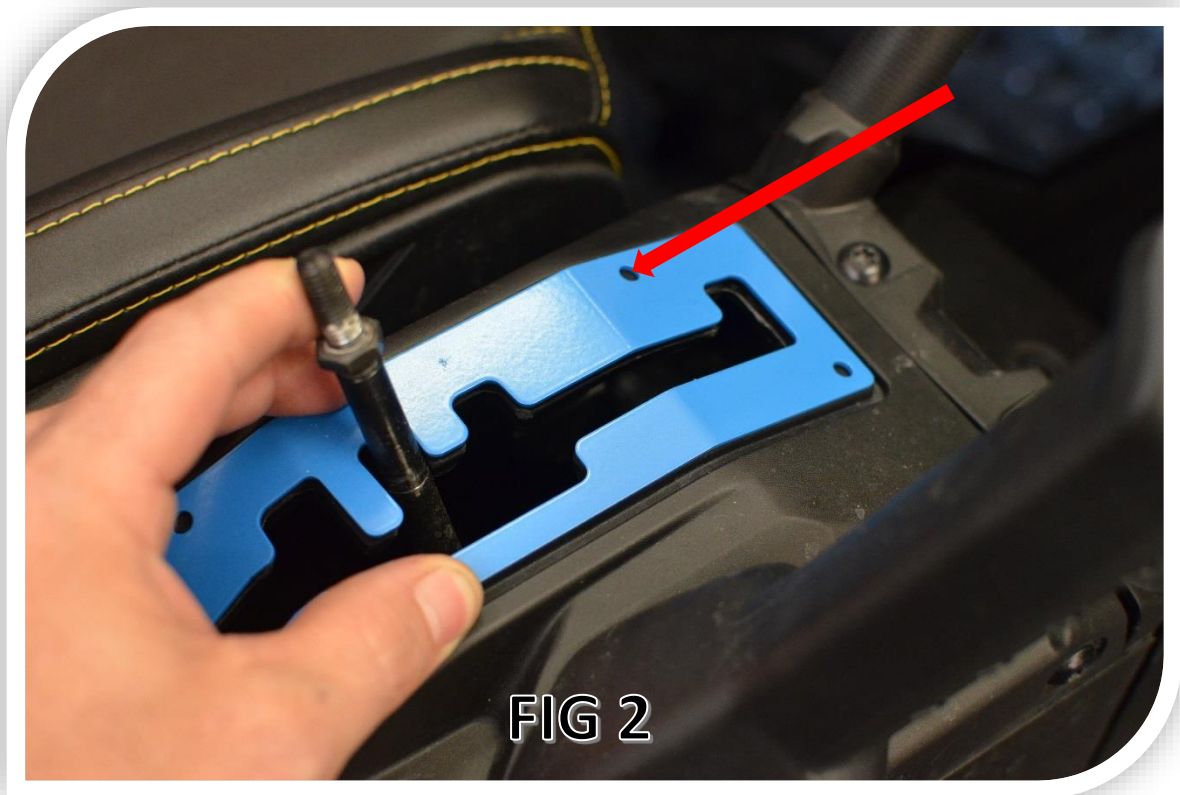


FIG 2



FIG 3



FIG 4