




INSTALLATION INSTRUCTIONS

RZR XP4 ROCK SLIDERS

1401 S. Broadway Suite 103A | Joshua, TX 76058

Read Instructions entirely, and view illustrations before beginning.

ITEM	DESCRIPTION	QTY
A	DVR SIDE ROCK SLIDER	1
B	HEAVY DUTY MOUNT BOLTS	8
C	PASSENGER SIDE ROCK SLIDER (NO PHOTO)	1

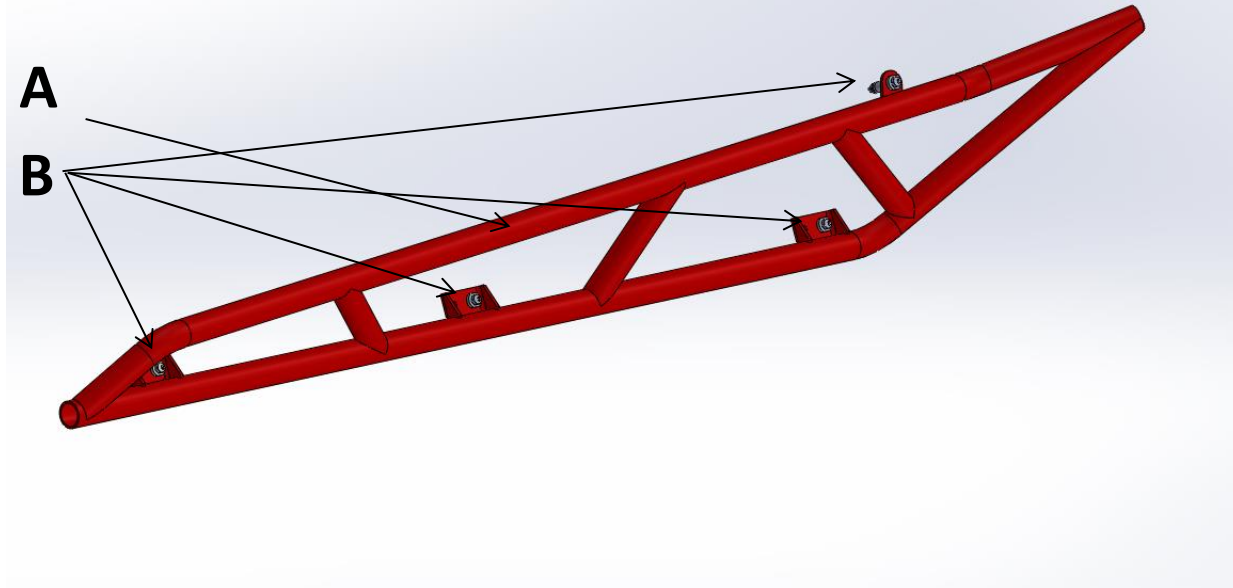

Have questions or comments?



817-366-6110



817-366-6110



INFO@ABFFABRICATION.COM

Thank You for Sharing



FACEBOOK.com/ABFfabrication



LIABILITY STATEMENT

ABF Fabrication accessories are engineered to best fit customer ATV/UTV's in stock condition. cutting, grinding, or modifying any original, or aftermarket, accessories will void any warranty offered by ABF fabrication and is not suggested. ABF Fabrication accessories could have fitment issues with other aftermarket accessories. If Customer has aftermarket accessories on vehicle, contact ABF Fabrication to ensure that all accessories will be compatible.

Customer should be aware that installing suspension accessories, wheels and tires, axles or other components may change the behavior of the vehicle and may require more frequent maintenance and part wear. Operating any off-road vehicle while, or after, consuming alcohol and/or drugs increases risk of bodily harm or death. No warranty or representation is made as to this accessories ability to protect customer from severe injury or death. ABF Fabrication urges operators and passengers to always wear a helmet and appropriate riding gear.

By purchasing and installing ABF Fabrication accessories, customer agrees that should any damages occur, ABF Fabrication will not be held responsible for repair fees, replacement parts, and shipping costs. ABF Fabrication, nor any 3rd party, will not be held responsible for any direct, indirect, incidental, special, or consequential damages that result from any accessories purchased from ABF Fabrication. The total liability of ABF Fabrication to customer for all damages, losses, and causes of action, if any, is not to exceed the total purchase price paid for the accessories that gave rise to the claim.

ABF Fabrication will warranty only accessories purchased from ABF Fabrication. Any damages or issues arising with OEM parts or other manufacturers accessories will not be covered by ABF Fabrication. ABF Fabrication accessories are not warranted if accessory was installed incorrectly, misused, or changed in any way.

Removal

1. Remove the 4 Torx bolts from the driver side that attach the plastic rocker to the frame. Keep these. You will be reusing 3 of them when installing the new rock sliders. **FIG 1.**
2. Repeat on the Passenger side.

Installation

1. Position the rock slider and use the 3 factory torx bolts to hold it in place. (This is just to hold the rock slider so do not tighten fully yet.) **FIG 2**
2. Install all 4 of the Heavy duty mount bolts. Be sure they are ALL installed before tightening. We recommend at this point to snug up the torx bolts to prevent the rock sliders from moving when tightening the heavy duty mounting bolts. **FIG 3**
3. Tighten the heavy duty mounting bolts to recommended 17 ft lbs of torque.
4. Recheck/ Tighten the torx head oem bolts. **FIG 4**
5. Repeat for other side.



FIG 1

